




SPARE PARTS ERN 500T

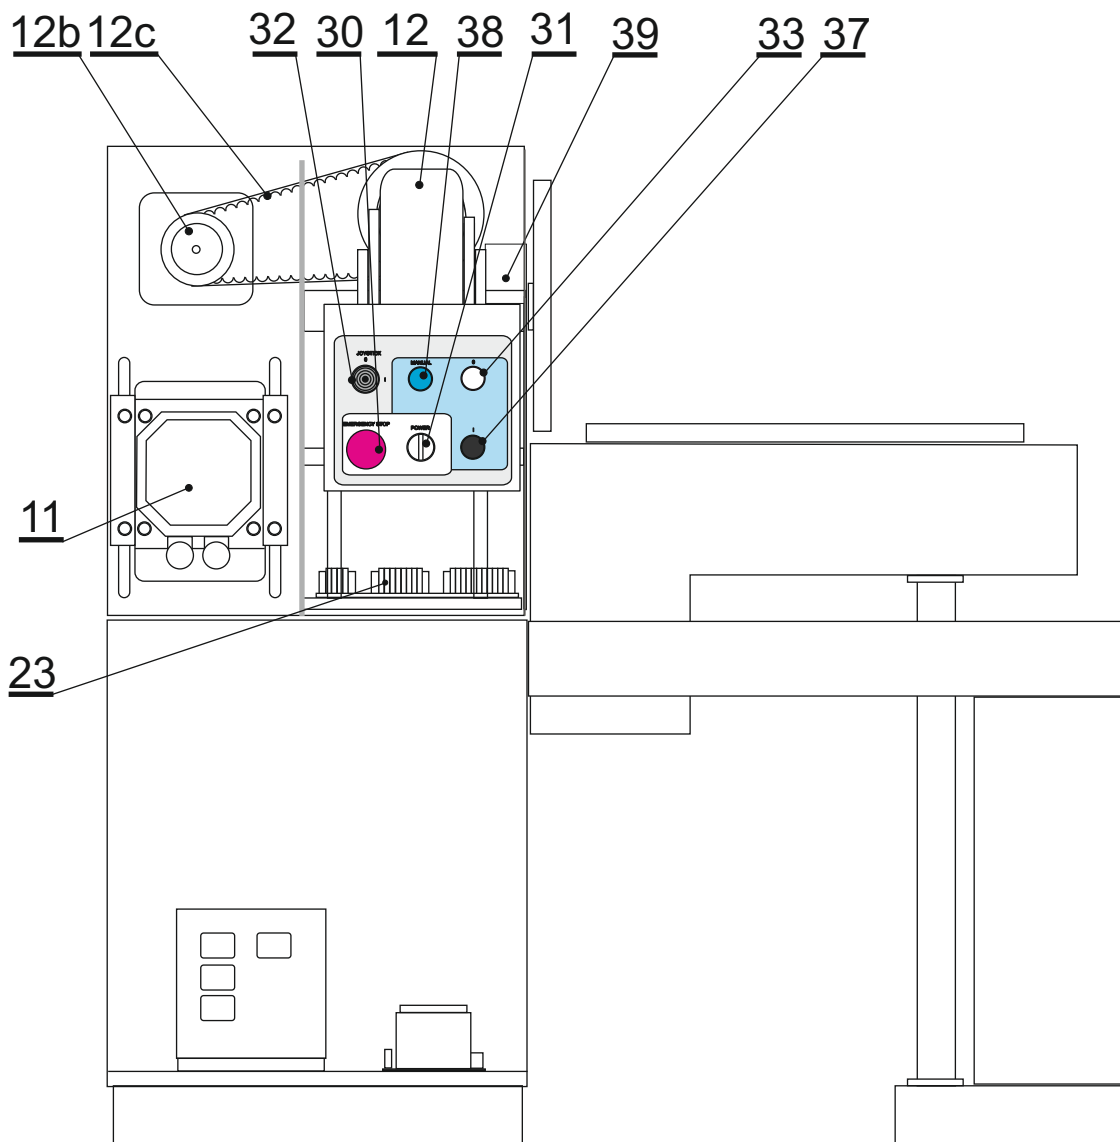


- 11. Servomotor
- 12. Gearbox
- 12b. Timing gear
- 12c. Timing belt
- 23. Connector
- 30. Emergency stop
- 31. Main switch
- 32. Joystick
- 33. Start - button
- 37. Stop - button
- 38. Manual - button
- 39. Opto sensor

TGT7 -4000-30-560
VF-185-P-10-HS-B3
32-8M-50/6F
8M-880-50
TA 048 68
TA 048 71
TA 048 73
TA 048 76
TA 026 41
TA 026 42
TA 026 43
QMT42VN6FF500-1000



SPARE PARTS ERN 500T

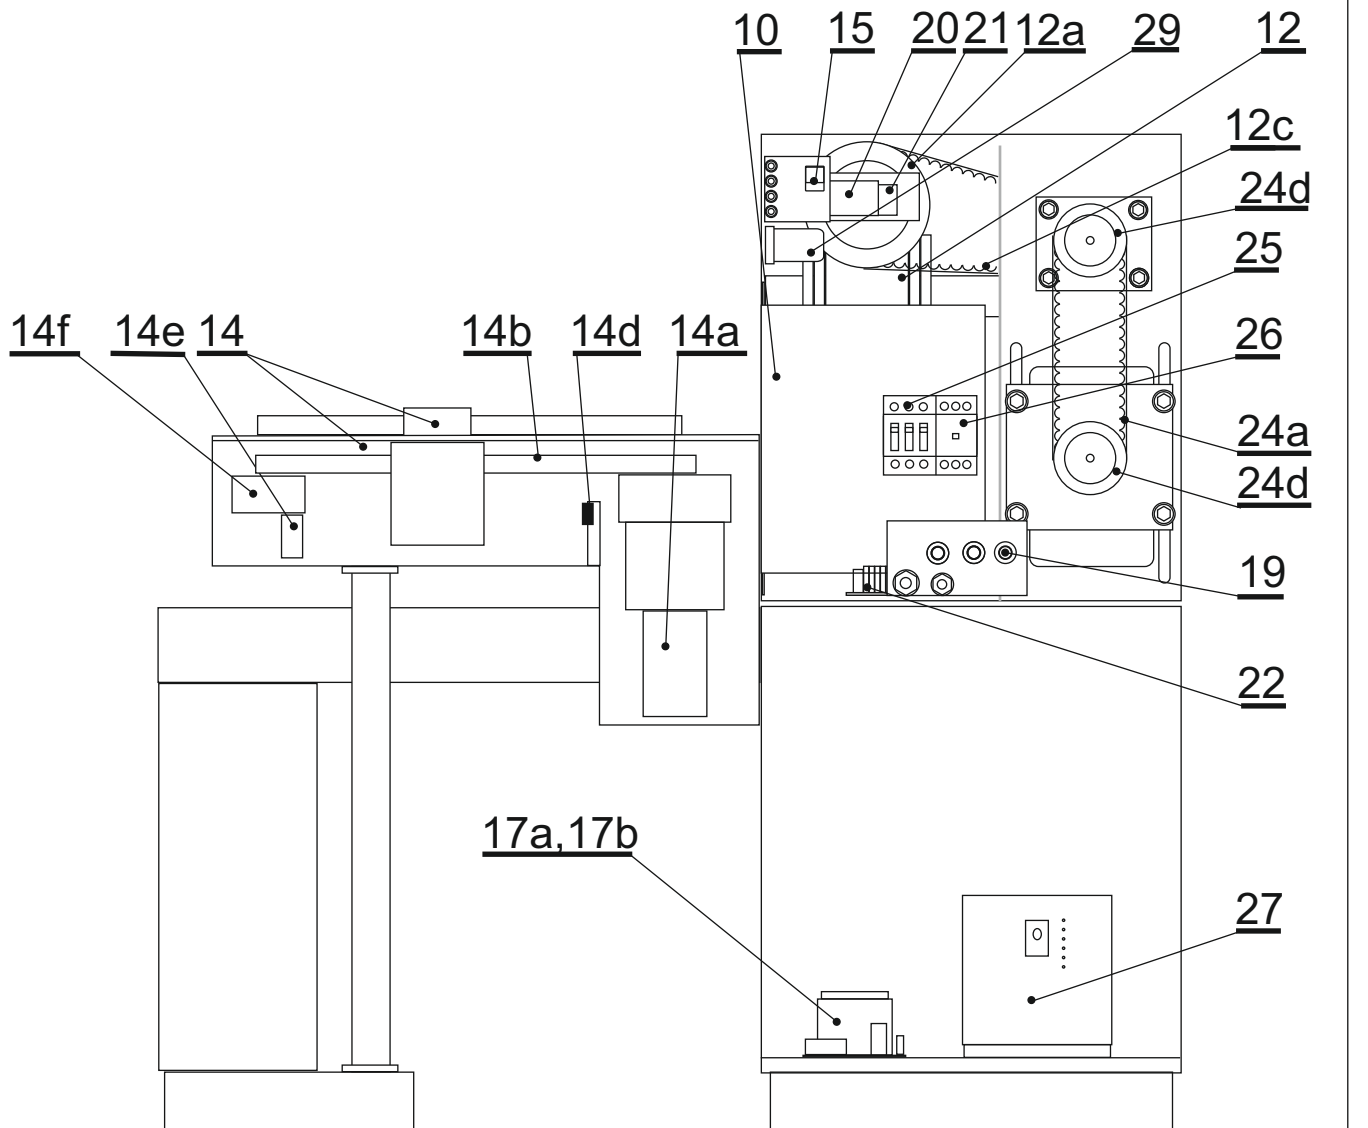


10. AC servo amplifier	Servostar 712	20. Servo power supply	TK 000 56 01
12. Gearbox	VF-185-P-10-HS-B3	21. Servo driver	TGA-24-9/20
12a. Timing gear	64-8M-50/6WF	22. Connector	TA 048 70
12c. Timing belt	8M-880-50	24a. Timing belt	8M-800-30
14. Wire guide unit	NB SGL35A- cart	24d. Timing gear	28-8M-30/6F
	NB 00133 932-guide	25. A.C.circuit breaker	RSI-25-40-A230
14a. Servomotor	TGH3-0160-12-24/T1BK-2M	26. Relay switch	LPN-16C-3
14b. Timing belt	32T10	27. Back - UPS	Smart UPS SUA 750I
14d. Microswitch plate	TK 0 057	29. Relay	RP 700 PC/230V3P
14e. Limit switch	XCK3 212 1G11		
14f. Ball bearing	6003 2ZR		
15. Connector for pedal	TA 026 44		
17a. Power supply unit	TK 000 36.00 - ST 106		
17b. Power supply unit	TK 000 36.00 - ST 107		
19. Fuse case	SI-HA 125000		




SPARE PARTS ERN 500T

GEAR 150 rpm

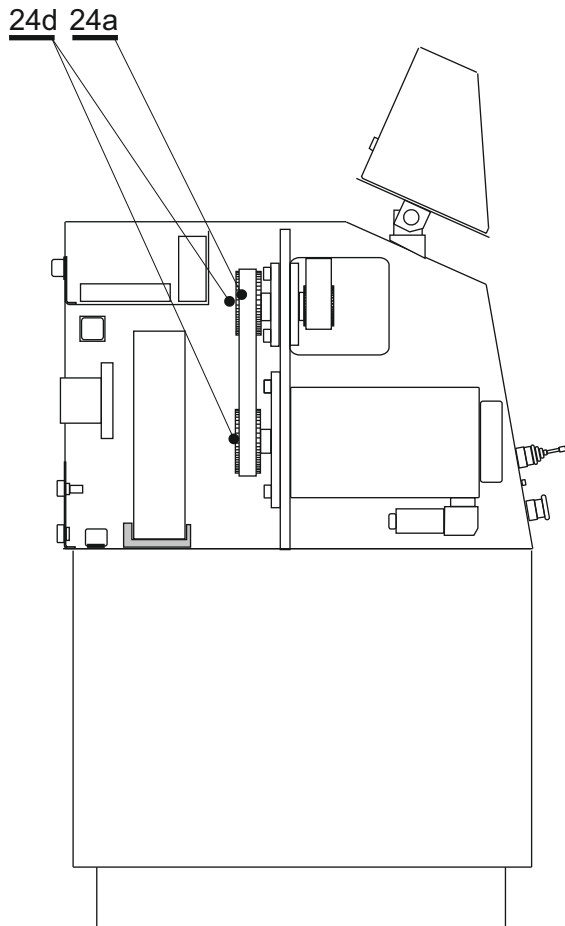

- 24a. Timing belt
- 24b. Timing gear
- 24c. Timing belt
- 24d. Timing gear


GEAR 75 rpm

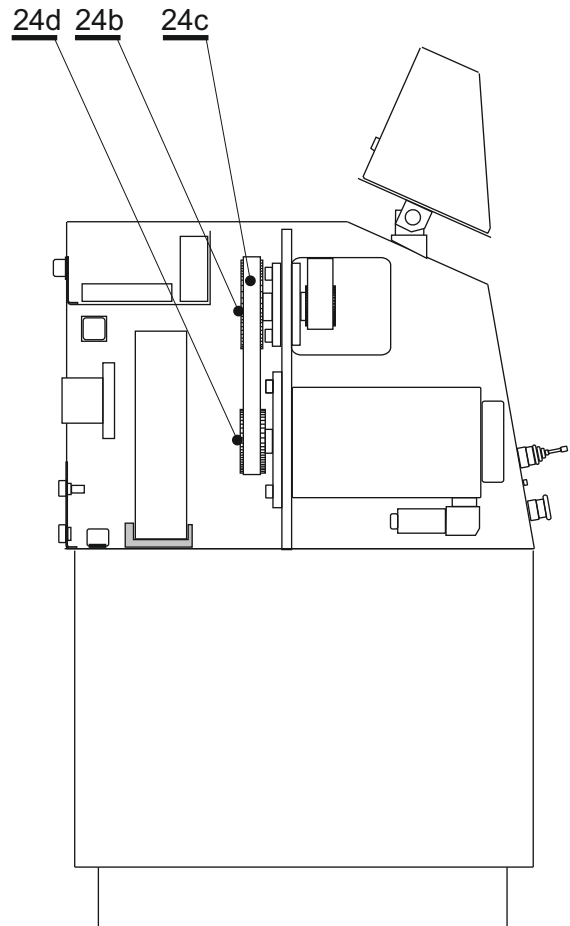

- 8M-800-30
- 56-8M-30/6WF
- 8M-880-30
- 28-8M-30/6F



SPARE PARTS ERN 500T

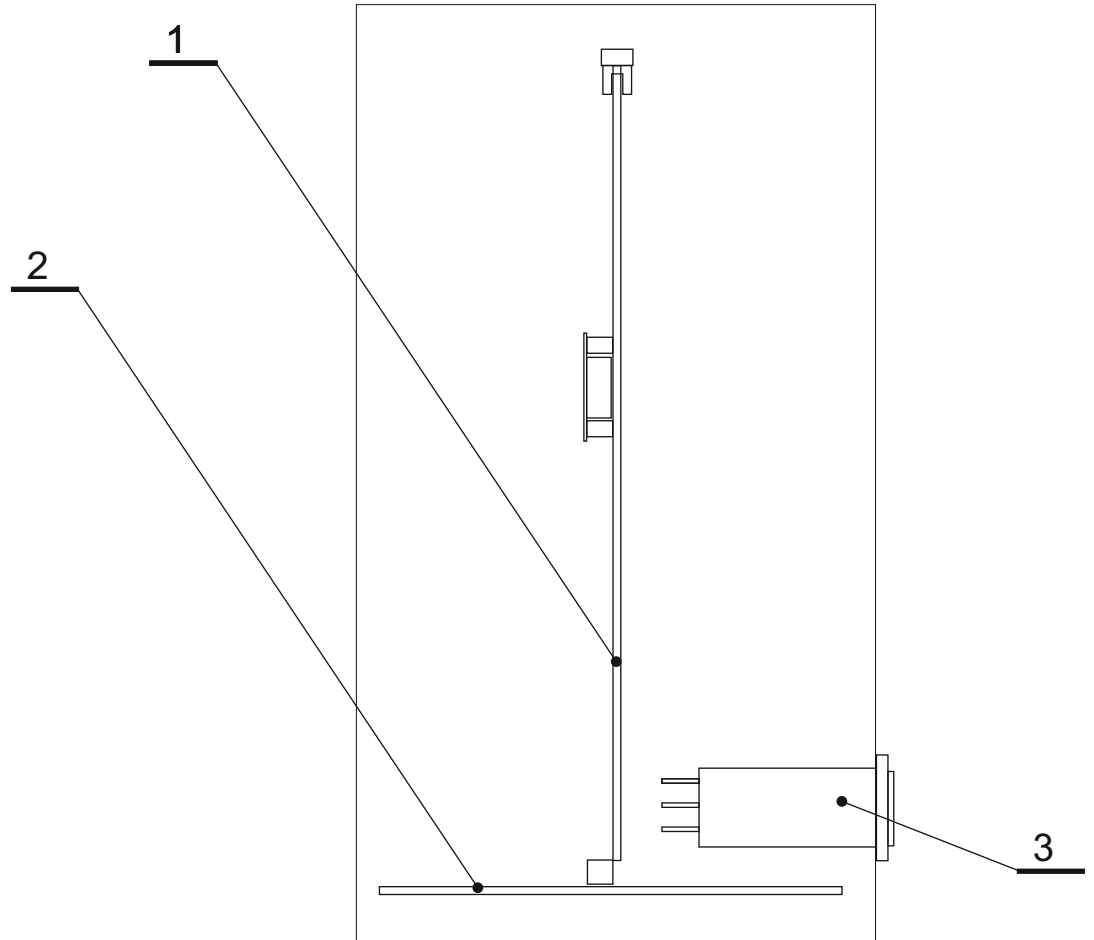

- 1. PCB
- 2. Backplane
- 3. Mains filter

TK 000 - 80 - 003
TK 000 73 - 00
ETI 39.19.160